



Mercedes Sound ISO Connector - Standard

Connections for Block A - Power

- 1) N/A 3) N/A 5) +12v output Blue 7/ Battery + Red
- 2) N/A 4) Ignition +12v Yellow 6 / Illumination Orange 8) Ground/ Black

Connections for Block B - Speakers

- 1) Right Rear + Purple 3) Right Front + Grey 5) Left Front + White 7) Left Rear + Green
- 2) Right Rear - Purple/Blk 4) Right Front - Grey/Blk 6) Left Front - White/Blk 8) Left Rear - Green / Black

Connections for Block C - Left hand side, uses Yellow plug

- 1) Line out Left Rear +
- 4) Line out Left Front
- 3) Line Out Ground/Earth
- 6) Switched Positive for Amplifier
- 2) Line out Right Rear +
- 5) Line out Right Front

Connections for Block C - Centre, uses Green plug

- 7) TEL +ve
- 10) ENA
- 9) CAN Low
- 12) TEL -ve
- 8) CAN High
- 11) REM
- 7 - Telephone Audio Input Signal - TEL +ve
- 8 - Second display, CLOCK (for radio sets with CAN data bus communication CAN High)
- 9 - Second display, DATA (for radio sets with CAN data bus communication CAN Low)
- 10 - Second display, ENA (not assigned for radio sets with CAN data bus communication)
- 11 - Remote control, REM (not assigned for radio sets with CAN data bus communication)
- 12 - Telephone Audio Input Signal - TEL -ve

Connections for Block C - CD Changer Right hand side, uses Blue plug

- 13) Data in
- 16) Voltage supply
- 19) Left Channel positive
- 15) Clock
- 18) Left & Right Channel Earth
- 14) Data out
- 17) Control Signal
- 20) Right Channel positive