

8W-52 TURN SIGNALS

Component	Page	Component	Page
Fuse 5	8W-52-3, 5	Tail Lamp Assembly- Left	8W-52-4
Fuse 6	8W-52-2	Tail Lamp Assembly- Right	8W-52-6
Fuse 8	8W-52-3, 5	Trailer Tow Control Module	8W-52-4, 6
Fuse 9	8W-52-2	Turn Signal No. 1- Left Front	8W-52-4
Fuse Block No. 1	8W-52-2, 3, 4, 5, 6	Turn Signal No. 1- Right Front	8W-52-6
Fuse/Relay Block	8W-52-3, 5	Turn Signal No. 2- Left Front	8W-52-4
G100	8W-52-4	Turn Signal No. 2- Right Front	8W-52-6
G102	8W-52-6	Turn Signal Relay	8W-52-2
G200	8W-52-2	Turn Signal/Anti-Theft Alarm	
Hazard Warning Switch	8W-52-2	Relay- Left	8W-52-3, 4
Headlamp Assembly- Left	8W-52-4	Turn Signal/Anti-Theft Alarm	
Headlamp Assembly- Right	8W-52-6	Relay- Right	8W-52-3, 5, 6
Instrument Cluster	8W-52-4, 6	Wiper/Turn Signal/Engine Start	
Multi- Function Switch	8W-52-2	Control Module	8W-52-2
Security System Module	8W-52-4, 6		
Sentry Key Remote Entry Module	8W-52-3, 4		









