


ENGINE 111.948 /978, 601.942 /970 in MODEL 638 // (except 638.094 /194 /2) except CODE (G40) Automatic transmission

- 1 Eccentric nut  
2 Cover  
3 Dashboard trim  
A Annular gap

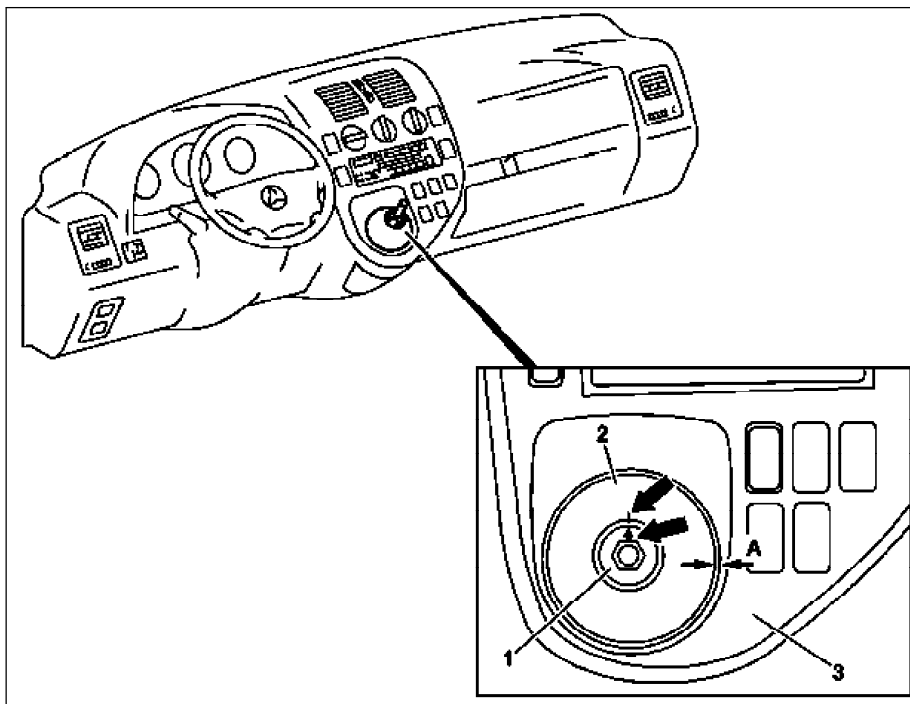

S26.60-3015-06

	Adjusting		
1	Remove knob on shift lever		AR26.60-S-6601A
2	Align mark (arrow) on cover (2) with mark (arrow) on eccentric nut (1)		
3	Turn eccentric nut (1) with cover (2) down or up until the annular gap (A) is obtained	<b>i</b> The cover (2) must not rest or rub on the dashboard trim (3) when shifting.	
4	Check annular gap (A) between cover (2) and dashboard trim (3) and adjust if necessary	<b>i</b> To adjust, push down cover (2) and twist at the same time, allow cover (2) to lock in place and recheck annular gap (A).	*BE26.60-N-1001-01A
5	Install knob on shift lever		AR26.60-S-6601A

#### Test and adjustment values for shift

Number	Designation	Model
		638.014/034/ 064/074/114/134/ 164/174 without code G40
BE26.60-N-1001-01A	Annular gap "A" between shift lever cover and dashboard trim	mm 3
	See figure	AR26.60-S-6430A