
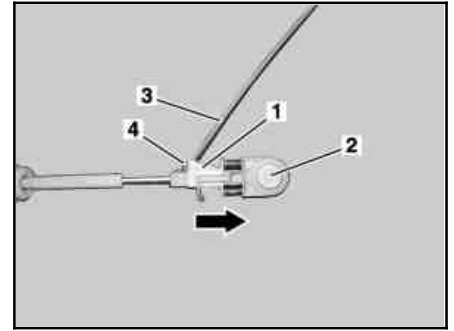


AR26.60-S-6604-01S 	Inserting adjusting tool into length adjuster of shift cables Adjusting tool for length adjuster on shift cable		WF58.50-S-2660-04S
--	--	--	--------------------

1 Compress the length adjuster (1) on the ball socket (2) of shift cables in the direction of the arrow.

2 Insert adjusting tool (3) into the bore of the latch (4).



N26.60-2292-01