


AR26.60-S-6627-01A	Unhooking and hooking on shift control cables on transmission		
--------------------	---	--	--

1 Remove ball sockets (2) of shift cables on transfer lever (3).

**i** Do not mix up shift cables.

2 Remove tab washers (1) of shift cables, guide shift cables out of the bracket (4).

**i** Check condition of tab washers (1) and replace if necessary.

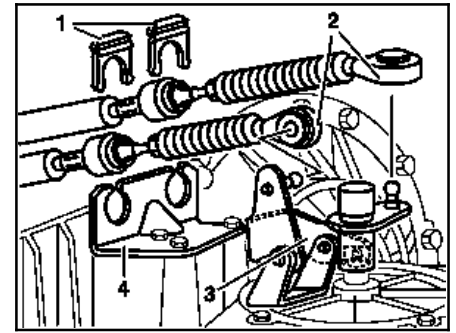

S26.60-2000-01