


MODEL 215, 220

Shown on model 220

- 1 Cover
 2 Screws
 3 Vent tube
 F1/1 Right fuse box
 K40/7 Right front fuse and relay module
 N3 CFI control module
 N10/7 Right SAM control module
 N15/3 ETC control module (electronic transmission control)

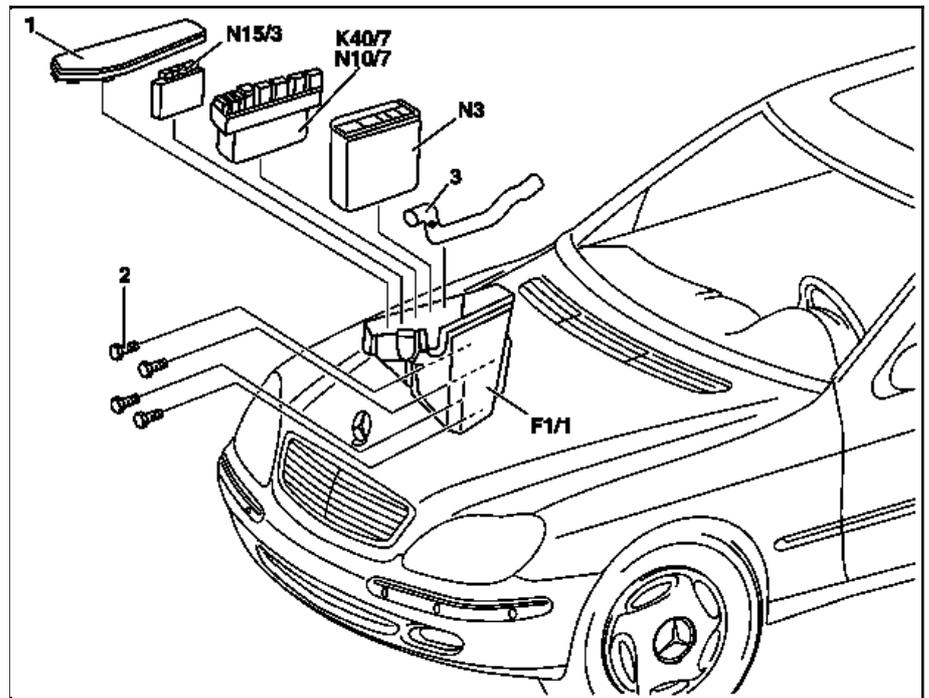

P54.15-2078-06

	Removal, installation		
1	Connect quiescent current retention unit		AR54.10-P-1030-07I
2	Disconnect ground lead from battery		AR54.10-P-0003I
3	Open engine hood and move to upright position		AR88.40-P-1000M
4	Release and remove cover (1) on left fuse box (F1)		
5	Remove CFI control module (N3)		AR07.08-P-7008I
6	Remove right SAM control module (N10/7) with right front fuse and relay module (K40/7)		AR54.21-P-1261I
7	Remove ETC control module (N15/3)		AR27.19-P-1719I
8	Remove vent tube (3)		
9	Pull wiring harnesses back to right fuse box (F1/1)		
10	Unscrew screws (2) and remove fuse box	i Installation: Check seal on wire passage from fuse box/vehicle interior	
11	Install in opposite order		