



S68.20-4508-01

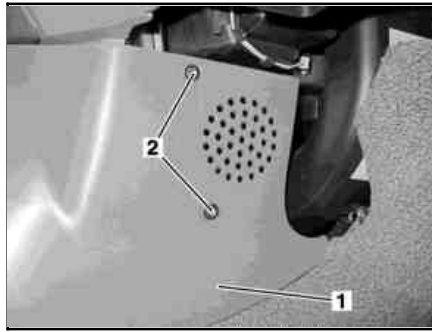

S68.20-4509-01

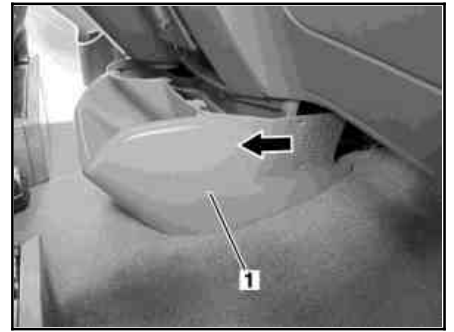


S68.20-4510-01

Shown on model 639 with center console with stowage compartment code FF1

1 Center console

2 Bolts

☒ ☒	Remove/Install		
1	Unscrew right and left bolts (2).		
2	Remove center console (1) toward rear (arrow)	☒ Long wedge	<a href="#">*115589035900</a>
3	Install in the reverse order	i Check mounting clips for damage and replace if necessary	

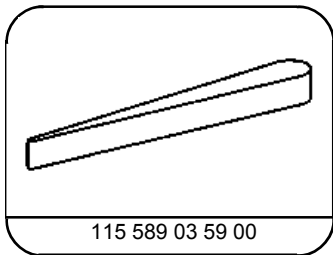

115 589 03 59 00

Long wedge